


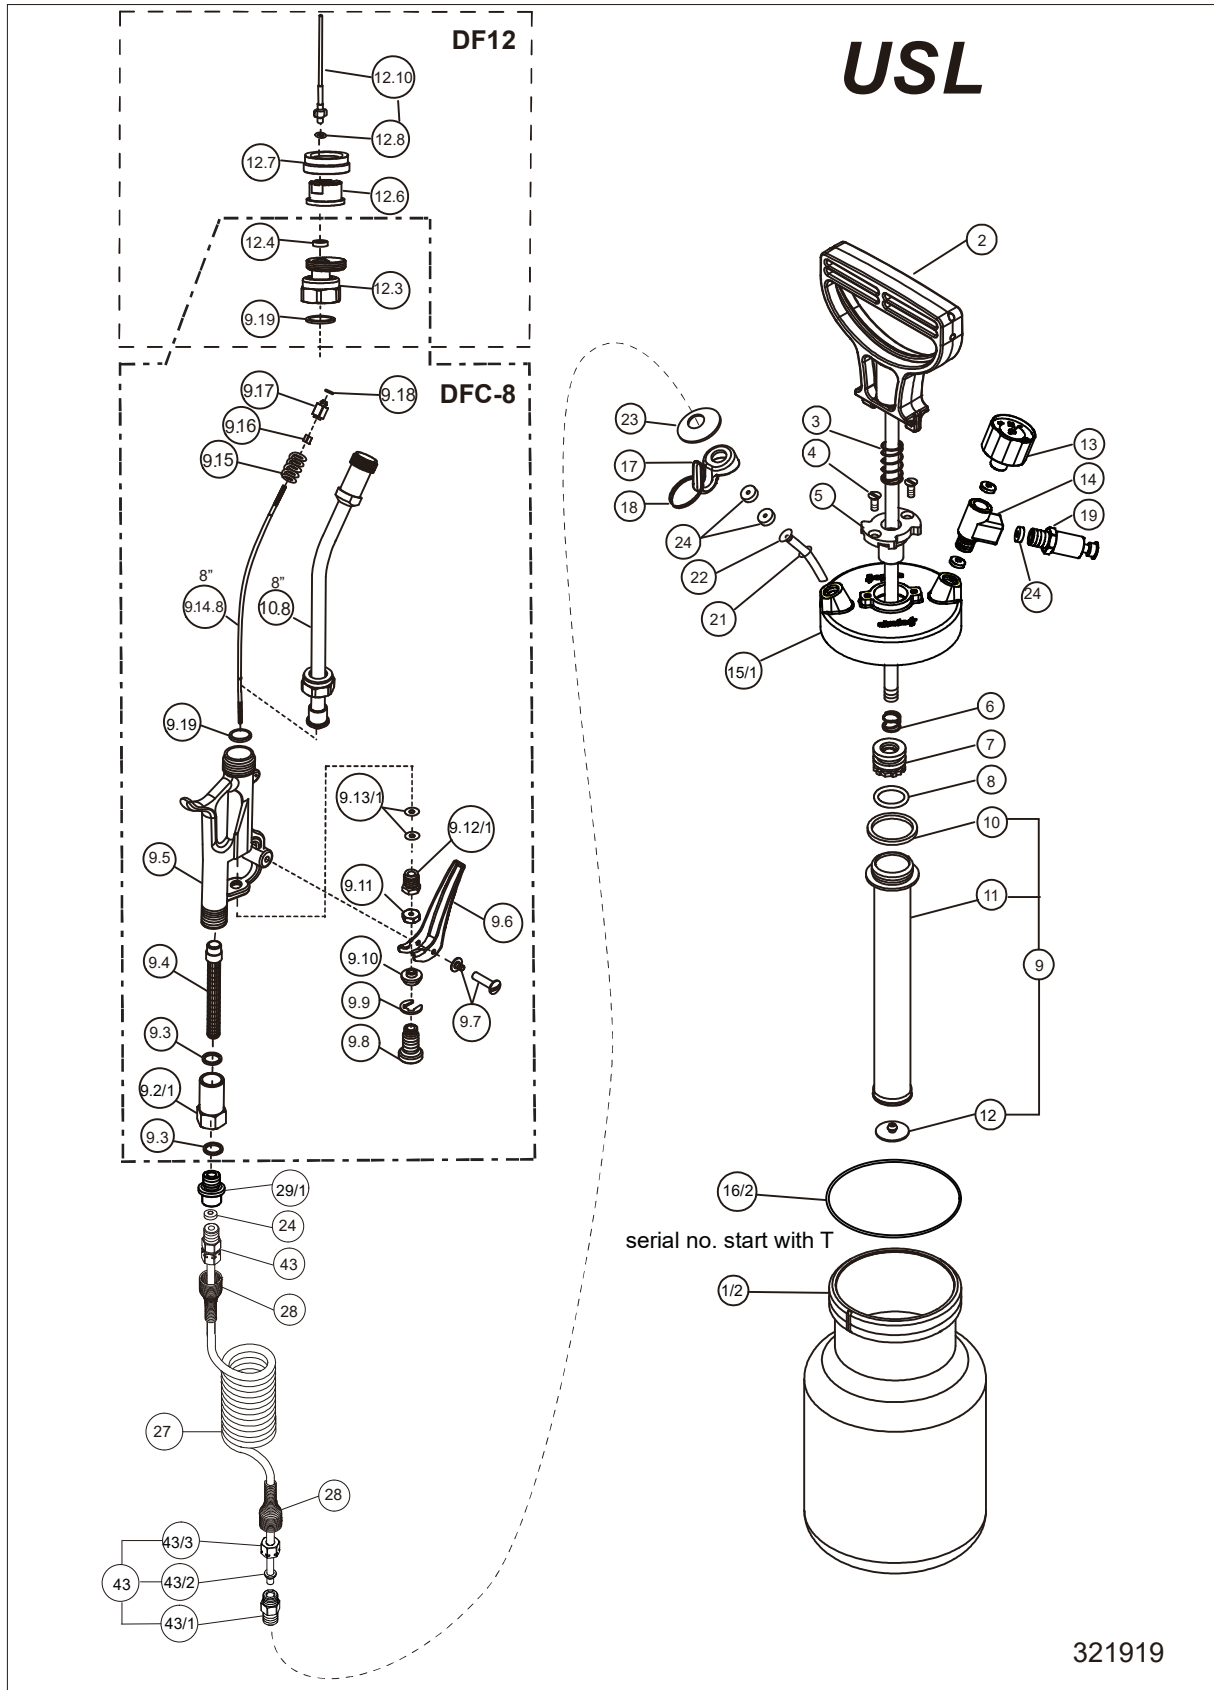

USL Spare Part List

Pos.	Part No.	Description	Pos.	Part No.	Description
1/2	604-001-110	Bottle	DF9.3	500-009-030	Gasket
2	604-002-010	Piston Rod, Black	DF9.4	500-009-040	Strainer
3	604-003-000	Spring	DF9.5	500-009-050	Valve Body
4	604-004-000	Countersunk Screw	DF9.6	500-009-060	Trigger
5	604-005-010	Cylinder Cap, Black	DF9.7	500-009-070	Trigger Screw
6	505-001-020	Spring	DF9.8	500-009-080	Safety Lock Nut
7	604-007-000	Piston	DF9.9	500-009-090	Snap Ring
8	604-008-000	O-Ring	DF9.10	500-009-100	Adjusting Screw
9	604-009-000	Pump Cylinder, Assembly	DF9.11	500-009-110	Lock Nut
10	935-027-010	O-Ring	DF9.12/1	500-009-121	Sealing Nut
11	604-011-000	Cylinder Tube	DF9.13/1	500-009-131	O-Ring x2
12	604-012-000	Check Valve	DF9.14.8	500-009-141	Valve Cable 8"
13	604-013-000	Pressure Gauge	DF9.15	500-009-150	Seat Spring
14	510-003-030	T-Connector	DF9.16	500-009-160	Seat Stem nut
15/1	604-015-010	Bottle Cap	DF9.17	500-009-170	Seat Stem
16/2	604-016-110	O-Ring	DF9.18	500-009-180	O-Ring, Viton
17	604-017-010	Hook, Black	DF9.19	505-009-150	Gasket
18	601-018-000	Hook Ring	DF10.8	500-010-080	Lance 8"
19	604-019-000	Pressure Release Valve	DF12	500-012-000	Multi-Nozzle, Assembly
21	604-019-006	O-Ring	DF9.19	505-009-150	Gasket
22	604-022-010	Supply Tube S.S.	DF12.3	500-012-030	Multi-Nozzle Holder
23	604-023-000	Disc	DF12.4	500-012-040	Gasket
24	505-002-020	Gasket	DF12.6	500-012-060	Multi-Nozzle
27	601-004-130	Coiled Hose, Blue	DF12.7	500-012-070	Retainer
28	601-004-040	Hose Holder Spring	DF12.8	935-018-000	O-Ring
29/1	604-029-010	Female Adapter	DF12.10	500-012-110	Straw with O-Ring
43	601-004-100	Swivel Hose Adapter, Assembly	USL	501-016-030	DF Service Kit, incl. DF (9.1, 9.3*2, 9.13/1*2 9.18, 9.19*2, 12.4, 12.8)
43/1	601-004-105	Swivel Hose Adapter			
43/2	601-004-103	Cutting Ring			
43/3	601-004-104	Retaining Nut		604-035-020	Pump Service Kit, incl. 8, 10, 12, 16/2, 21, 24*5
DFC-8	501-000-081	DFC-8" Valve Assembly			
DF9.2/1	501-009-020	Housing Strainer			