

Connecting FADS

- Screw on the right nozzle to be used.
- The aerosol can must be put on a level surface in upright position.
- Remove the spray tip from the top of the aerosol can to expose the short plastic stem (fig. 1).
- Center the valve seat above the stem then push down firmly to insert the stem into the bottom of can clamp assembly (fig. 2).
- Twist wing lock to secure the can clamp assembly fixed firmly on top of the can (fig. 3)
- Turn the valve to the “on” (vertical) position to permit fluid from the can to full the coiled hose (fig. 4).
- Press the trigger for spraying and release the trigger to stop spraying (fig. 5).

Disconnecting FADS


- Turn the valve to the “off” (horizontal) position and empty the coiled hose by spraying into an approved area (fig. 4).
- Pull up the locking ring and lift the can clamp straight up and off the can.

Remove spray tip
plastic stem

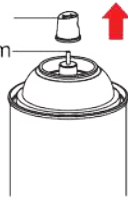

①


push down
Can Clamp

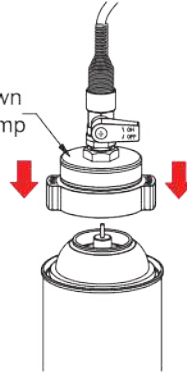

②

Twist Wing Lock to
Open/Close

Close

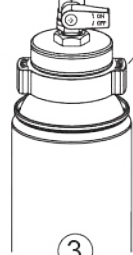

Open

③

on/off Valve



④

press Trigger



⑤



only use the recommended unit with the proper aerosol